


Quick Start Guide

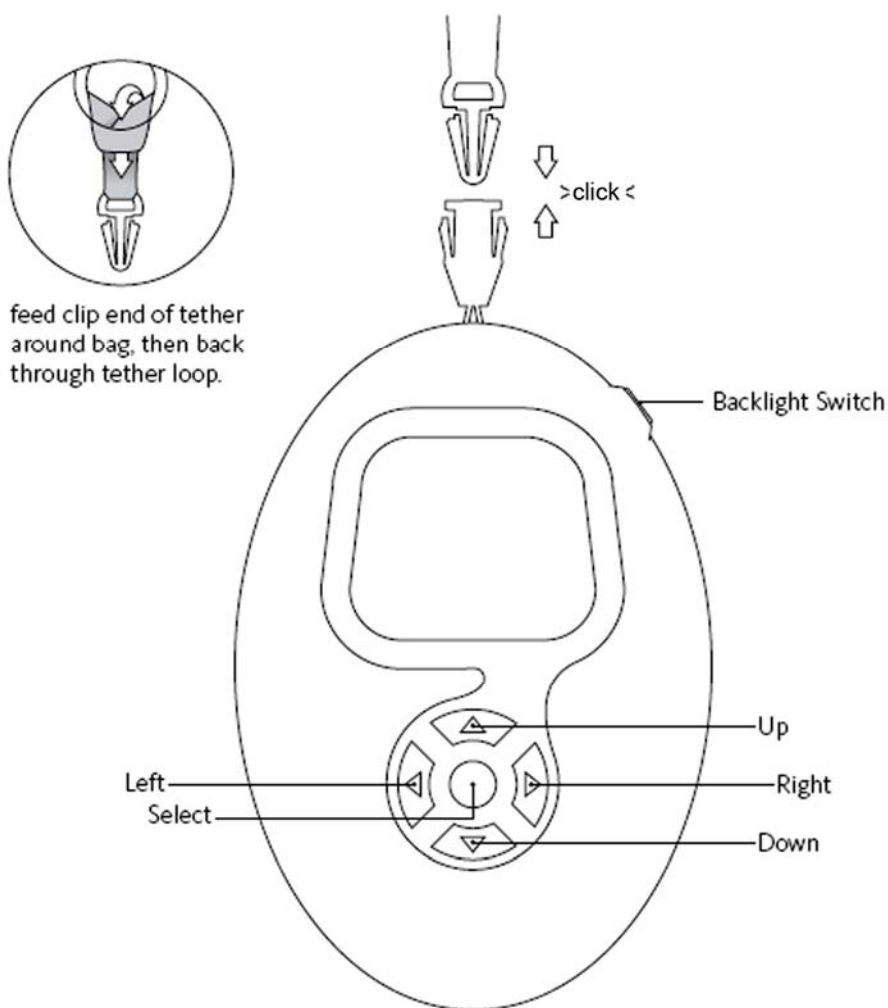

QUICK START GUIDE

Nagtags are so easy to use that you might have already figured this part out! But, just in case you like to read directions, here's what the buttons on your Nagtag do:

- Center/Select:** On/Select/Enter. Also wakes your Nagtag from "sleep" mode
- Up:** Moves the cursor (underline) up, letters scroll upward, A-Z
- Down:** Moves the cursor (underline) down, letters scroll downward, Z-A
- Left:** Moves the cursor left, jumps to the top of lists, or returns to the previous screen or menu (when at the top, and [back] icon appears).
- Right:** Moves the cursor right, and jumps to the bottom of lists.
- Backlight:** For viewing in dim light, press the switch once. The light will turn off automatically thirty seconds after you are finished.

Tip: To scroll quickly through lists or characters, hold the key down for two seconds.

USER'S MANUAL

To Get Started:

Turn your Nagtag on. Press the select button. The user name is displayed for two seconds, and then the main menu appears.

Take a few minutes to explore the master list:

From the main menu, scroll down to MASTER LIST and press Select.

Using the Up, Down, Left, and Right buttons, scroll through the list of sports and other categories to find the one you want.

To view equipment for a specific sport or category, press the Select button. Return to the previous screen by pressing the Left key (only once, if the [back] icon is on), or return to the main menu by pressing the Left button several times.

To Create your Checklist:

From the main menu, select SET UP, and then select CREATE CHECKLIST.

Choose ADD ITEM.

Scroll through the sports and categories. When you find the item you want, just press the Select button. It will be added to your checklist, and the sports/categories menu will return to the beginning.

Repeat until your checklist is complete.

To Use your Checklist:

Choose CHECKLIST from the main menu. The items on your checklist will appear one at a time. When you've packed them into your bag, press the Select key and see the checkmark appear. When everything has been packed the screen will display the message YOU'RE DONE!

To Create your own Checklist items:

From the CREATE CHECKLIST menu, select ENTER NEW ITEM.

Using the Up or Down buttons, find the letter of your choice. You can either press the key several times, or hold it down — after a few seconds, the letters will automatically scroll.

After choosing a letter or character, move the cursor to the next space by pressing the Right arrow key.

Repeat these steps until your word or item is complete / programmed.

When your word is complete, press Select. The message ADD TO CHECKLIST? will appear. To add, select YES using the Select button.

To Enter your name:

From the main menu, choose SET UP, and ENTER YOUR NAME.

Erase the message, USER'S NAGTAG by pressing the Left key. CAUTION: Stop pressing the Left key when the U is underlined (or you'll return to the main menu!)

Then follow the same procedure in entering characters as in the "To Create your own Checklist items" section.

When your name is complete, press the Select button and choose YES from the ADD/CHANGE YOUR NAME? message. In addition to your name, you might want to add a description of your activity, such as, "DANNI'S SOCCER BAG."

To Enter emergency contacts:

Important: check with your parents about what to enter!

From the main menu, select EMERGENCY, then select ENTER CONTACTS.

Choose a contact or entry by scrolling with the Down key, then press Select.

Enter the information (up to four rows of 10 characters per line) by following the same procedure in entering characters as in "To Create your own Checklist items."

When your information has been completely entered, press Select. Your info will be added to the contact list and you will be returned to the main menu.

Advanced functions:

You can use the CREATE CHECKLIST menu to modify your checklist. If you only want to remove an item or two, select DELETE ITEM. If you would like to make a brand-new checklist, simply select ERASE CHECKLIST.

It's possible for you to have one hundred items — or more — on your checklist. The actual maximum number depends upon the amount of detail you include in the emergency contacts, as well as the number of unique items you create for yourself. When you exceed 80% of the memory capacity, the Nagtag will warn you.

Tip: Think twice before entering anyone's last name, and telephone number or address. We don't like to think about it, but sometimes this world can be a scary place.

Tip: For the item to appear in the center of your screen, simply press the Right key until the cursor appears on the second line. To erase individual letters, press the Left key.

90-Day Limited Warranty

Nagtags LLC warrants this product, under normal use, for a period of 90 days from the original purchase date. The warranty covers defective workmanship and materials (excluding batteries), and does not cover damage resulting from accident, unreasonable use, negligence, improper service, or other causes not arising out of defects in material or workmanship. Nagtags LLC will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser.

During this 90-day period, the device will either be repaired or replaced (at our option) without charge to the purchaser when returned with proof of date of purchase to: Accu-Logistics, 2031 Burroughs Avenue, San Leandro, CA 94577.

Please remove the battery and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and a prepaid postage container.

Battery Information

Your Nagtag is powered by a single 3V battery. To replace the factory installed battery, use a screwdriver to loosen the screw until the battery cover can be removed. Insert a CH2005 battery, positive (+) side up, as indicated inside the battery compartment. Replace the battery cover and tighten with the screwdriver.

Do not over-tighten!

CAUTION! AS WITH ALL SMALL BATTERIES, THE BATTERY USED IN THIS NAGTAG SHOULD BE KEPT AWAY FROM SMALL CHILDREN WHO MIGHT STILL PUT THINGS IN THEIR MOUTHS. IF A BATTERY IS SWALLOWED, PLEASE CONSULT A PHYSICIAN IMMEDIATELY.

Maintenance

Handle your Nagtag carefully

Keep your Nagtag out of dusty or dirty areas

Keep your Nagtag away from moisture or extreme temperatures.

Do not disassemble your Nagtag. If a problem occurs, such as random lines or characters on the screen, press the Reset button or remove and replace the battery, or try new batteries. If problem persists, consult the warranty information located above. Only use battery of the same or equivalent type as recommended.

Do not use a rechargeable battery.

Do not try to recharge non-rechargeable battery.

When the battery is exhausted, recycle and replace it.